

Code: P80190X

Item: Anchoring clamp PA470, PA495, PA4120

INSTALLATION MANUAL

1.	Unscrew the nuts of the tensioning clamp.	
2.	Release the plastic wedges of the clamp to have enough space to place the cables (four cores).	
3.	Place the cables (four cores) in the tension clamp's cable grooves.	
4.	With placed cable in appropriate cable grooves of s tension clamp, use the wrench to tighten the nut of s the clamp to 44Nm torque. This will establish proper fixation of the cables into the clamp. Also, tighten the hanging screw nut to adequate level.	17 mm 19 mm
5.	Place the installed tension clamp on hook, bracket or other similar hanging segment on the wall, pole, etc.	
6.	The clamp is now ready for exploitation.	

