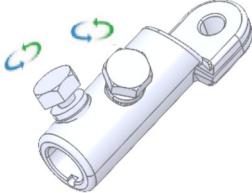
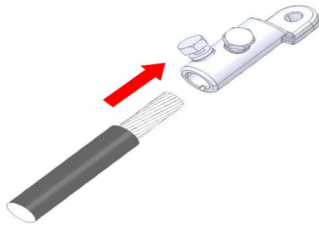
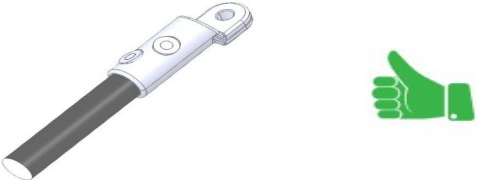


CODE: P40610X, P40611X
Item: Mechanical shear-head lugs

INSTALLATION MANUAL

1.	Peel off the insulation from the cables for the appropriate length and clean the conductors with steel brush of dirtiness and/or dust.	
2.	Unscrew bolts of Mechanical shear-head lug to have enough space to place conductors into clamp.	
3.	Place the conductors in the grooves of the lug as shown on the picture. NOTE: use inserts for smaller cable cross - sections. For larger cross - sections, it is not necessary to use inserts (in this case, the cable cannot be placed in the lug with inserts).	
4.	Tighten the bolts of the connector with adequate wrench till shear heads shear from the bolts. This will be adequate tightening torque for the lug.	
5.	Mechanical shear-head lug is now ready for exploitation.	

LEGAL NOTICE:

The product must be installed only by a competent trained person with installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. PLAMEN accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions. Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.

