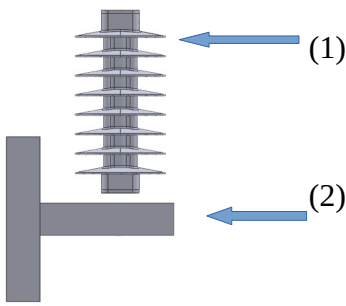
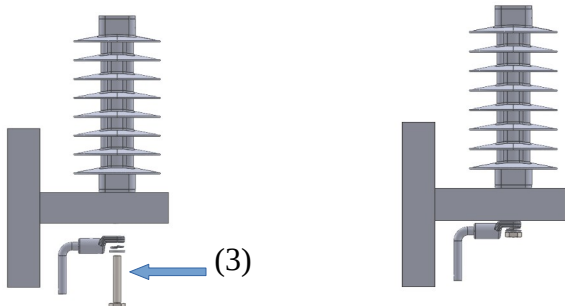
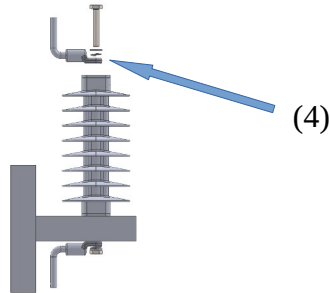
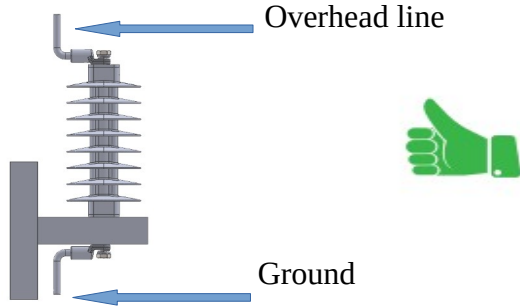


CODE: P2148XX
Item: Medium voltage surge arrester

INSTALLATION MANUAL

| | |
|--|--|
| <p>1. Place the surge arrester(1) on the console (2) (Plastic or metal console). The hole on the underside of the surge arrester should line up with the hole on the bracket.</p> |  |
| <p>2. Place a flat and split washer on the chrome screw (3) (which is part of the set). Put the screw (3) installed in this way through the hole on the console and screw it on the underside of the surge arrester. In this way, the surge arrester is connected to the ground.</p> |  |
| <p>3. From the upper side of the surge arrester, connect the arrester to the overhead line (put the screw through the hole on the lug (4) through which the connection to the overhead network is made). Screw in the screw on the top side of the surge arrester.</p> |  |
| <p>4. Surge arrester is now ready for exploitation.</p> |  |

LEGAL NOTICE:

The product must be installed only by a competent trained person with installation practices and with sufficient knowledge of good safety and installation practices in respect of electrical equipment. PLAMEN accepts no liability concerning claims resulting from misuse, incorrect installation or ignored national safety regulations or other national provisions. Failure to follow the installation instructions may result in damage to the product and serious or fatal injury.

